



User Instructions, AMAL-SHAFT®



Handle the shaft with care!


The shaft should **not** be hit/bumped towards a hard surface, e.g. a concrete floor



Use a soft surface, e.g. a rubber carpet, when changing cores...



...alternatively put the shaft on a table

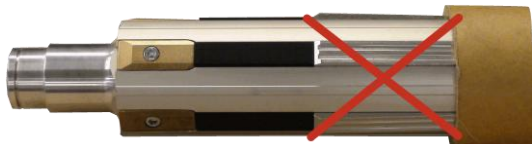

The **entire** expander length must be covered by the core to avoid excessive wear and for valid warranty



Make sure the shaft is properly inflated to avoid excessive wear and for valid warranty

Inflate time for a 1 m shaft is in general

5-8 sec

minimum air pressure should be

6 bar or 87 PSI

You find Maintenance Instruction for **AMAL-SHAFT®** on www.hofpartner.se